



LOGIC HAND HELD RECEIVER PROGRAMMER PROGRAMMING INSTRUCTIONS

WARNING: Disconnect the red wires on the receiver from the system before programming. Leaving wires connected will re-program other receivers on system.

- To turn on the Programmer press the ON/ENTER button (after 20-30 seconds of no activity the programmer will turn off). The display will read:

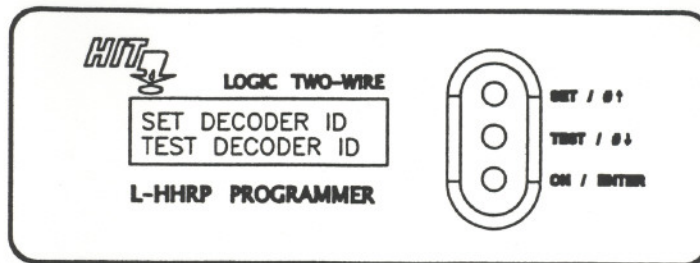


- Clip the 2 red leads of the Programmer to the 2 red leads of the Decoder/Receiver to be programmed. Be sure the black leads of the Receiver/Decoder are not touching.

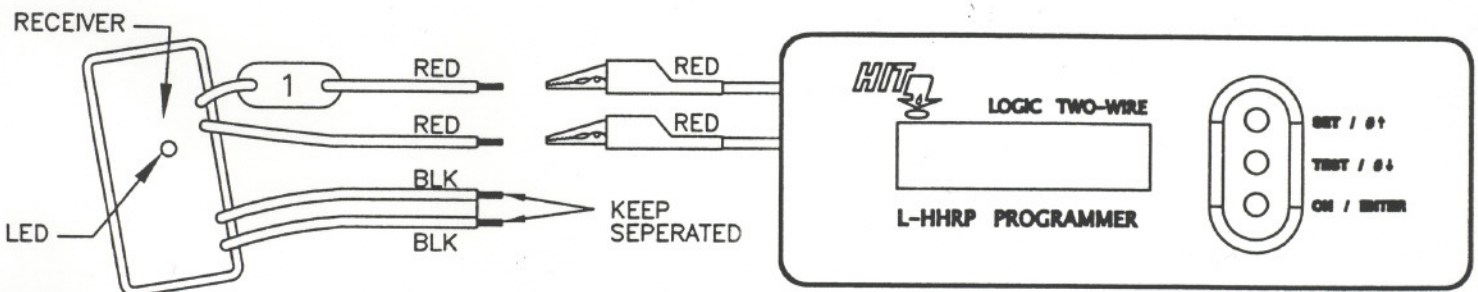


- To Program or Test:

- To Program a Decoder/Receiver press the top button. The display will read:

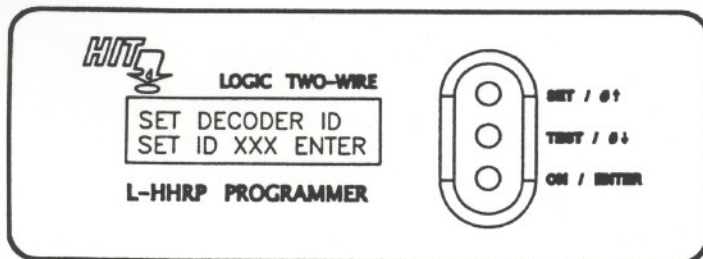

- To Test a Decoder/Receiver ID, press the middle button. The display will read:

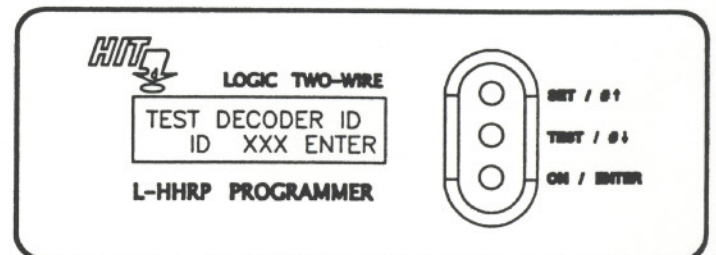

- Use the top 2 buttons to scroll up or down to the required number.
- Press Enter.
- The LED in the Receiver/Decoder will flash 3 times.
- The receiver is now programmed.

- Use the top 2 buttons to scroll up or down to the required number.
- Press Enter.
- The LED will light for 3 seconds.
- Confirmed Decoder/Receiver Number.

- This unit will display "LOW BATTERY":

To replace the battery, remove the six (6) screws from the back cover. Replace the 9V battery and replace the back cover and screws. Be sure to place red wires properly.

